


# MINI LED WALL PACK(LT-XT-08) INSTALLATION INSTRUCTIONS

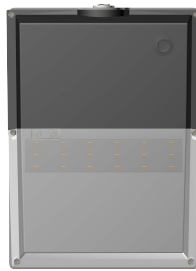

## IMPORTANT

**READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.**

Fixtures must be wired in accordance with the National Electrical Code and all applicable local codes. Proper grounding is required for safety. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

**WARNING: Make certain power is OFF before installing or maintaining fixture. No user serviceable parts inside.**

## FIXTURE MOUNTING


To ensure weatherproof seal, apply weatherproof silicone sealant around the edge of the **Housing** and/or **Junction Box**. This is especially important with an uneven wall surface. Silicone all plugs and unused conduit entries.

### MOUNTING TO JUNCTION BOX

1. Loosen Door Screws and open the Door. Screws will remain in place with Silicone Washers.
2. Knock out appropriate Slots when mounting to junction box (not supplied) and secure to Junction box.
3. Feed supply wires through Junction Box. Check the Gasket is fully sealed.
4. Make sure all gaskets are properly seated. Close and tighten the Door Screws. Silicone all Plugs and unused conduit entries.

### MOUNTING TO WALL

1. Loosen Door Screws and open the Door. Screws will remain in place with Silicone Washers.
2. Knock out appropriate Slots when mounting to the wall Surface.
3. Secure Housing to a sturdy wall. Use appropriate mounting hardware such as lag bolts and anchors with washers suitable for the mounting surface. Check the Gasket is fully sealed.
4. Make sure all gaskets are properly seated. Close and tighten the Door Screws. Silicone all Plugs and unused conduit entries.
5. If outdoor surface is irregular, use caulk to seal any gaps around the Housing.

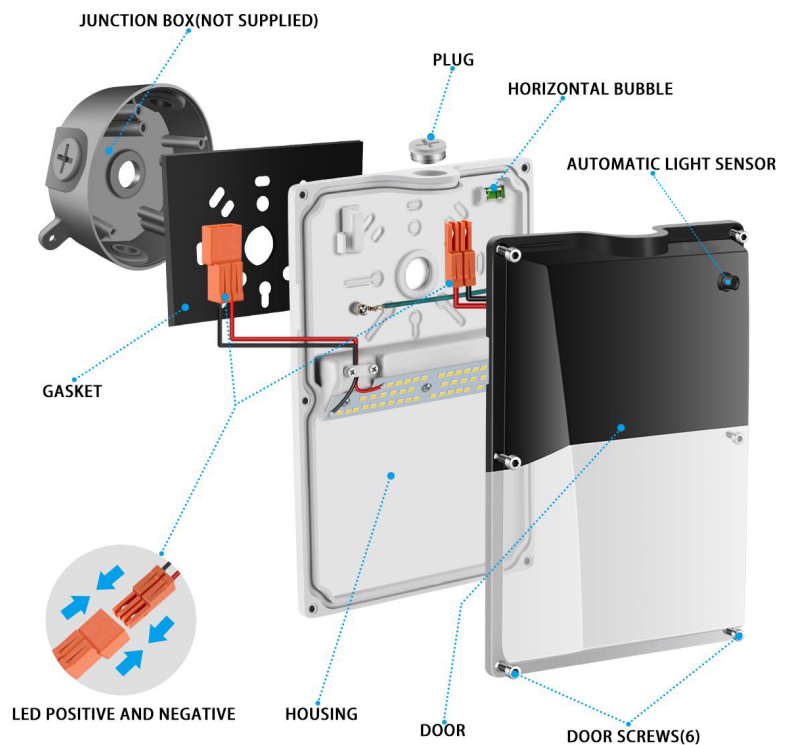


# MINI LED WALL PACK(LT-XT-08) INSTALLATION INSTRUCTIONS

## WIRING

voltage driver permits operation at 120V ,  
50 or 60 Hz except fixtures factory ordered with a  
120V photocell or 277V photocell.

1. Connect the black fixture lead to the (+) LINE supply lead.
2. Connect the white fixture lead to the (-) COMMON supply lead.
3. Connect the GROUND wire from fixture to supply ground.

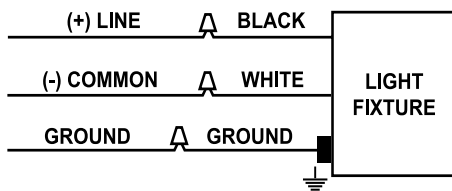

## CLEANING & MAINTENANCE

**CAUTION: Be sure fixture temperature is cool enough to touch. Do not clean or maintain while fixture is energized.**

1. Clean lens & fixture with non-abrasive glass cleaning solution.
2. Do not open fixture to clean the LED. Do not touch the LED.

## TROUBLESHOOTING

1. Check that the line voltage at fixture is correct. Refer to wiring directions.
2. Is the fixture grounded properly?

*Note: These instructions do not cover all details or variations in equipment nor do they provide for every possible situation during installation operation or maintenance.*