
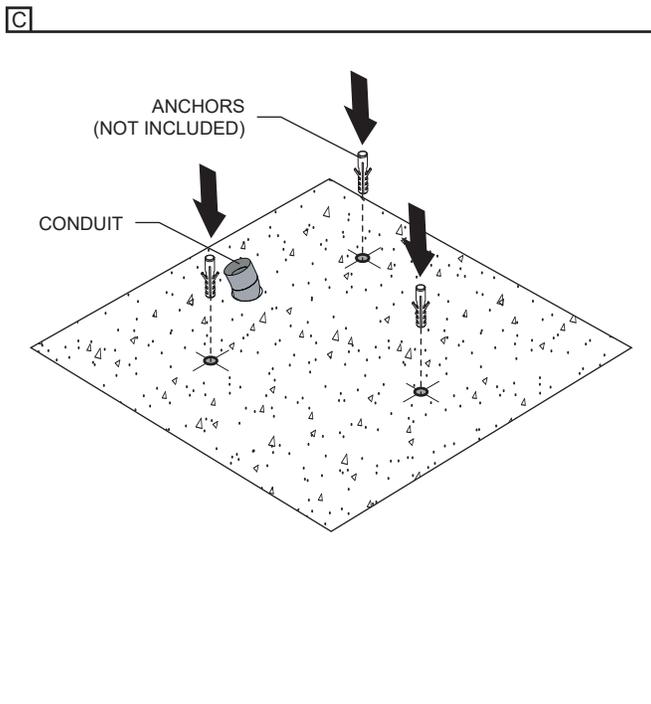
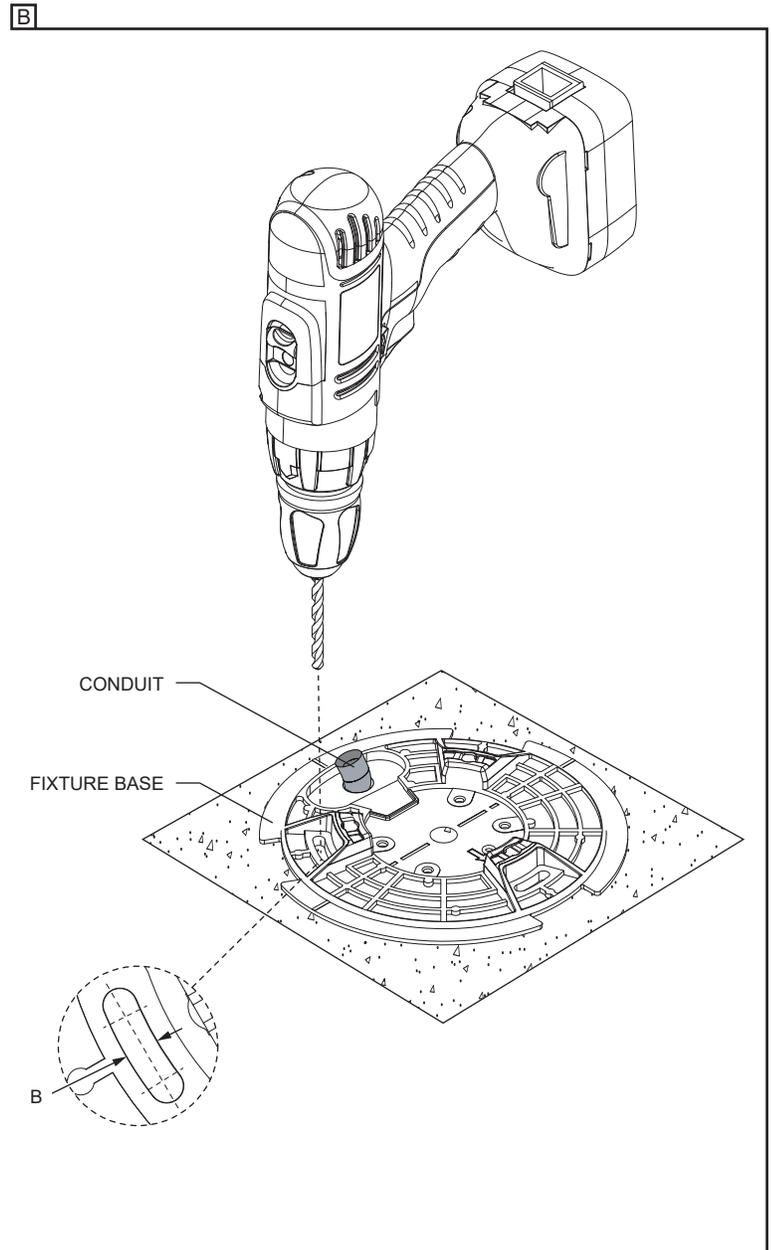


# LT-BM INSTRUCTIONS SHEET

**IMPORTANT** - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.  
 THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

## GROUND INSTALLATION REMOTE DRIVER (REM)


- A- UNCLIP THE FIXTURE FROM ITS BASE USING THE WEDGE TOOL (**INCLUDED**).
- B- USING THE HOLES ON THE FIXTURE BASE, PREPARE SURFACE FOR INSTALLATION.
- C- INSTALL (3) ANCHORS (**NOT INCLUDED**) INTO THE SURFACE.

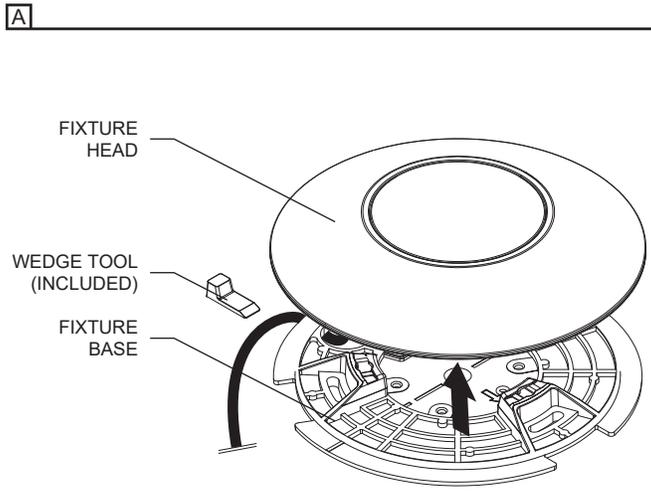


**LT-BM INSTRUCTIONS SHEET**

- D- FASTEN THE FIXTURE BASE TO THE SURFACE, USING (3) SCREWS (NOT INCLUDED) (FOLLOW SCREW SIZE TABLE).
- E- PASS THE FIXTURE CABLE THROUGH THE CABLE OUTLET AND CONDUIT AND MAKE ALL NECESSARY CONNECTIONS. (FOLLOWING WIRING DIAGRAM).
- F- CLIP THE FIXTURE HEAD TO THE BASE. FOR ALIGNMENT, REFER TO THE ARROWS ON THE FIXTURE HEAD AND BASE.

**D**

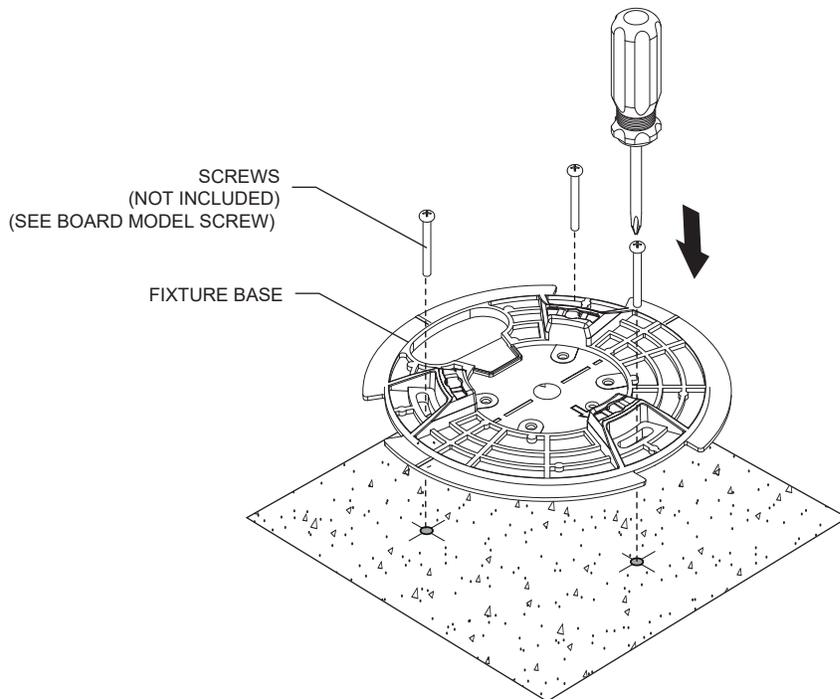

**E + F**

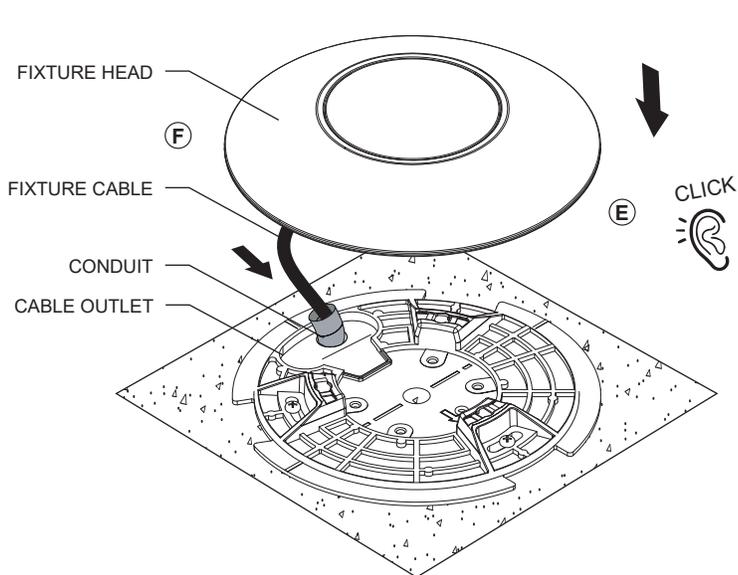

LED +	RED
LED -	BLACK

GROUND INSTALLATION ON STAKE  
REMOTE DRIVER (REM)

